



# Urbino single bench

**Cast iron legs**  
**Exotic wooded slats**

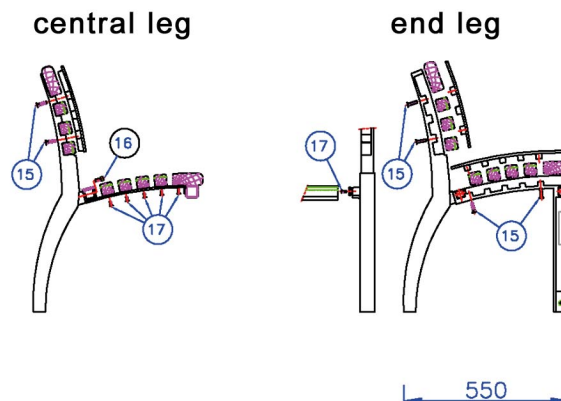

urbino line  
by J-M. Wilmotte

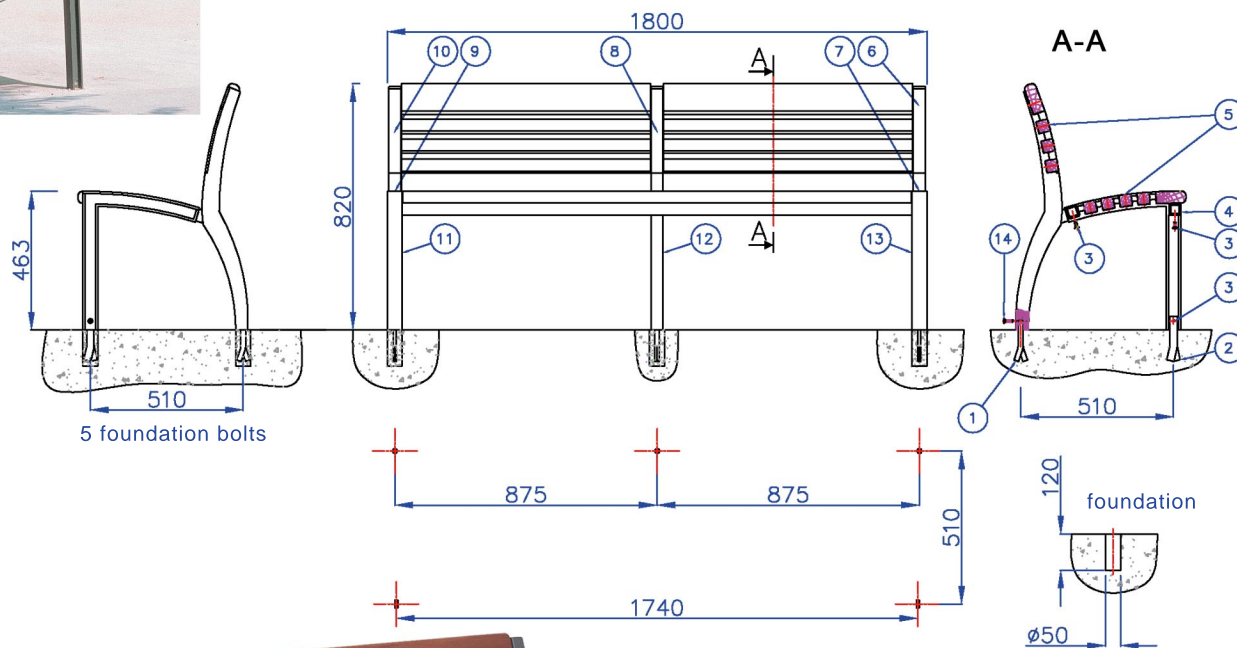

supplied assembled

Item	Nb	Description
1	3	ø16lg 150mm foundation bolt
2	2	25x10 lg150 rectangular foundation bolt
3	6	TFHc M8x20 screw
4	1	Support
5	1	Batch of slats
6	1	Right backrest support strap
7	1	Right seat support strap
8	1	Central backrest support strap
9	1	Left seat support strap
10	1	Left backrest support strap
11	1	Left leg
12	1	Central leg
13	1	Right leg
14	3	TFHc M8x30 screw
15	10	TFHc M8x35 screw
16	1	CHc M8x20 screw
17	13	TFHc M6x16 screw

benches